



A.i.f = Anti-interference filter
 b0 = Line switch
 b2 = Door switch
 b7 = Floater switch
 b9 = Salt switch
 b10 = Rinse aid switch
 f3.2 = Overheating thermostat
 f3.3 = Overheating protector

f5.1 = Level pressostat
 H1 = Heater
 K1 = Start capacitor
 m2 = Main pump
 m3 = Drain pump
 Nt = Net terminal

Ta = Tachometer, inside motor
 Te = Termistor NTC
 S1 = Inlet valve
 S2/4 = Detergent/Rinse aid coil
 S3 = Regeneration valve

● = 6.3mm connection on component
 ○ = PCB
 ○/○ = 6.3mm connection on component
 ○/○ = PCB
 ○/○ = 6.3mm connection on electronic
 ○/○ = PCB
 ○/○ = 6.3mm connection on electronic
 --- = Internal connection on electronic or component
 - - - = Connection with wire

N01551297