



## FUNCTION OF SWITCH SW1

	EXPLANATION
1	LEAVING FACTORY
2	RAPIDLY CHECK
3	CHECK ITSELF

## WIRING DIAGRAM

CODE	PART
COMP	COMPRESSOR
FAN	FAN MOTOR
S.V.	4-WAY VALVE
CAP1	OUTDOOR FAN CAPACITOR
CAP2 CAP3	OUTDOOR COMPRESSOR CAPACITOR
XT3~XT4	MIDDLE TERMINAL
XT1	6-WAY TERMINAL
XT2	4-WAY TERMINAL
RT3A RT3B	A/B SYSTEM PIPE TEMPERATURE SENSOR
RT4	A/B SYSTEM ROOM TEMPERATURE SENSOR
X57-9	CONNECTORS
XP7-9	CONNECTORS
T6	TRANSFORMER
A_COMP B_COMP	RELAY