



FUNCTION OF SWITCH SW1

| | EXPLANATION |
|---|-----------------|
| 1 | LEAVING FACTORY |
| 2 | RAPIDLY CHECK |
| 3 | CHECK ITSELF |

WIRING DIAGRAM

| CODE | PART |
|---------------|------------------------------------|
| COMP | COMPRESSOR |
| FAN | FAN MOTOR |
| S.V | 4-WAY VALVE |
| CAP1 | OUTDOOR FAN CAPACITOR |
| CAP2 CAP3 | OUTDOOR COMPRESSOR CAPACITOR |
| XT3-XT4 | MIDDLE TERMINAL |
| XT1 | 6-WAY TERMINAL |
| XT2 | 4-WAY TERMINAL |
| RT3A RT3B | ABB SYSTEM PIPE TEMPERATURE SENSOR |
| RT4 | ABB SYSTEM ROOM TEMPERATURE SENSOR |
| XST-9 | CONNECTORS |
| XP7-9 | CONNECTORS |
| TS | TRANSFORMER |
| A_COMP B_COMP | RELAY |