



- A.i.f = Anti-interference filter
- b8.a,b = Line switch
- b8.c = Prog. switch
- b2 = Door switch
- b7 = Floater switch
- b9 = Salt switch
- f3.2 = Overheating thermostat
- f3.3 = Overheating protector
- f5.1 = Level pressostat
- H1 = Heater
- K1 = Start capacitor
- m2 = Main pump
- m3 = Drain pump

- NH = Net terminal
- Te = Thermistor NTC
- S1 = Inlet valve
- S2/4 = Detergent /Rinse aid coil
- S3 = Regeneration valve
- = 6.3mm connection on component
- = PCB --- -- component
- = 6.3mm --- -- electronic
- = PCB --- -- electronic