

1602300008781 WIRING DIAGRAM

FOR ANTI-COLD WIND				
SW1	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2
TELO	24°C	15°C	8°C	EEPROM DEFAULT
FACTORY SETTING	<input checked="" type="checkbox"/>			

FOR SETTING FAN MOTOR CONTROL WHEN THERE IS NO DEMAND		
SW2	<input type="checkbox"/> ON <input type="checkbox"/> 1	<input type="checkbox"/> ON <input type="checkbox"/> 1
MODE	FAN OFF	FAN ON
FACTORY SETTING	<input checked="" type="checkbox"/>	


FOR SETTING AUTO-RESTART		
SW3	<input type="checkbox"/> ON <input type="checkbox"/> 1	<input type="checkbox"/> ON <input type="checkbox"/> 1
MODE	AUTO-RESTART	NOT AUTO-RESTART
FACTORY SETTING	<input checked="" type="checkbox"/>	

FOR TEMP. COMPENSATION (HEATING)				
SW6	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2
CODE	6°C	2°C	4°C	EEPROM DEFAULT
FACTORY SETTING	<input checked="" type="checkbox"/>			

FOR SETTING POWER			
ENC1	<input type="checkbox"/> 0 <input type="checkbox"/> 1 <input type="checkbox"/> 2	<input type="checkbox"/> 20 <input type="checkbox"/> 26 <input type="checkbox"/> 32~35	<input type="checkbox"/> 0 <input type="checkbox"/> 1 <input type="checkbox"/> 2
CODE POWER	0	1	2
FACTORY SETTING	<input checked="" type="checkbox"/>		

ACCORDING TO RELATED MODEL.

FOR SETTING NETADDRESS				
S1+S2	<input type="checkbox"/> 0~F <input type="checkbox"/> 1 2	<input type="checkbox"/> 0~F <input type="checkbox"/> 1 2	<input type="checkbox"/> 0~F <input type="checkbox"/> 1 2	<input type="checkbox"/> 0~F <input type="checkbox"/> 1 2
CODE	0~F	0~F	0~F	0~F
NETADDRESS	0~15	16~31	32~47	48~63
FACTORY SETTING	<input checked="" type="checkbox"/>			

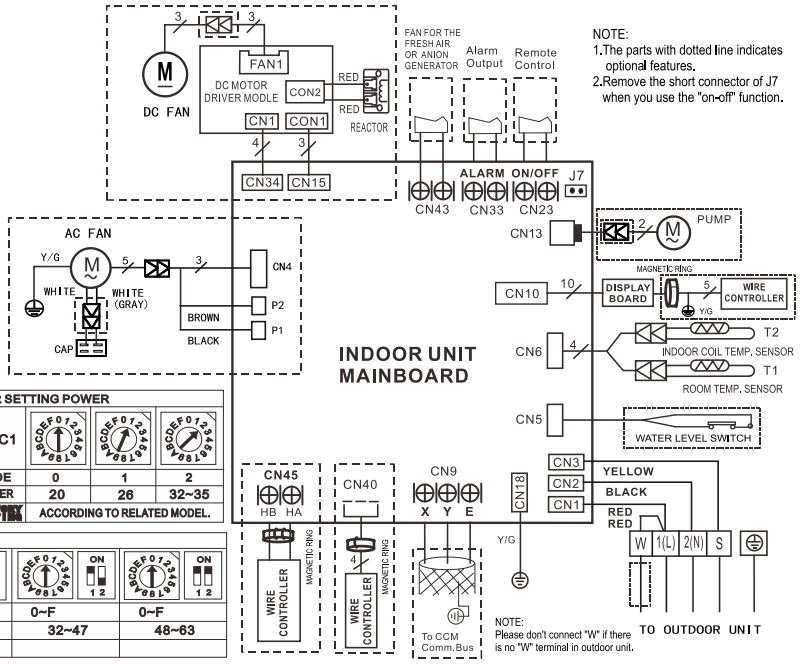

NOTE:
1. The parts with dotted line indicates optional features.
2. Remove the short connector of J7 when you use the "on-off" function.

NOTE:
Please don't connect "W" if there is no "W" terminal in outdoor unit.