



OVEN SWITCH ①	8	72	144	216	288
∇	0				
4 - P2					
3 - P1					
1 - P1					
2 - P1					
5 - P3					

357 542801a