



SCHEMA ELETTRICO

OVEN SWITCH	0	1	2	3	4	5	6	7	8	9	10
POSIZIONI	0	1	2	3	4	5	6	7	8	9	10
6 - 6a											
5 - 5a											
4 - 4a											
3 - 3a											
2 - 2a											
1 - 1a											

357 582902a