



WIRING

OVEN SWITCH	POSITIONS						STEAM
	0	5	4	3	2	1	
6 - 6a							
5 - 5a							
4 - 4a							
3 - 3a							
2 - 2a							
1 - 1a							

357 585601a