


357 753001A

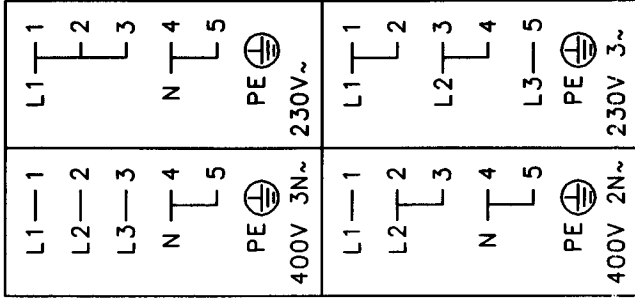

OVEN SWITCH	8	72	144	216	288
0					
4 - P2					
3 - P1					
1 - P1					
2 - P1					
5 - P3					

PLATE SWITCH

