
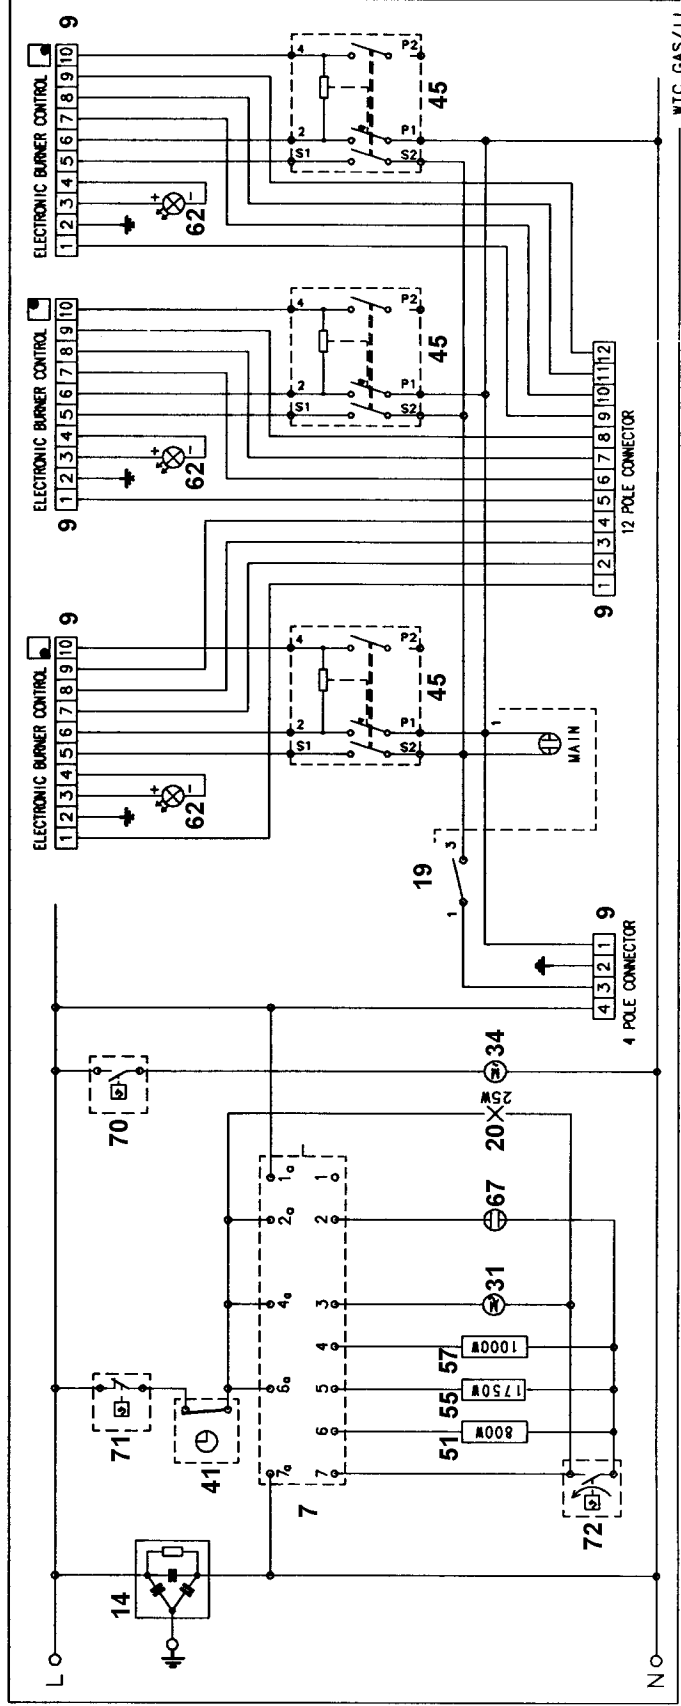


OVEN SWITCH	0	72	144	216	288	WV
7 - 7a						
6 - 6a						
5 - 4a						
4 - 4a						
3 - 4a						
2 - 2a						
1 - 1a						

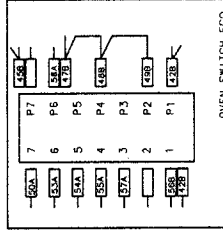

357 585702a