


357 752501A

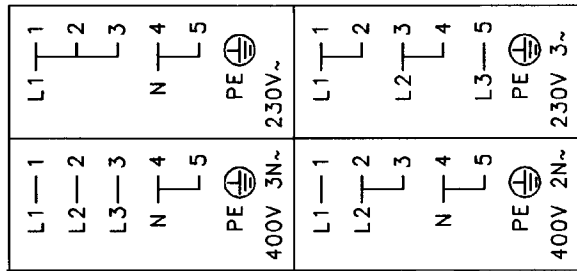

OVEN SWITCH ①

| ANGLE | 0 | 30 | 60-240 | 270 | 300 |
|------------------|-----|------|--------|--------|-----|
| POSITION | 0 | LAMP | OVEN | BOTTOM | TOP |
| P ₃ ⊖ | ⊖ 5 | | | | |
| P ₁ ⊖ | ⊖ 2 | | | | |
| P ₂ ⊖ | ⊖ 1 | | | | |
| | ⊖ 3 | | | | |
| P ₂ ⊖ | ⊖ 4 | | | | |

PLATE SWITCH ②

| POSITION | 0 | 6 | 5 | 4 | 3 | 2 | 1 |
|------------------|-----|---|---|---|---|---|---|
| P ₃ ⊖ | ⊖ 5 | | | | | | |
| P ₁ ⊖ | ⊖ 2 | | | | | | |
| P ₁ ⊖ | ⊖ 1 | | | | | | |
| P ₁ ⊖ | ⊖ 3 | | | | | | |
| P ₂ ⊖ | ⊖ 3 | | | | | | |
| P ₂ ⊖ | ⊖ 4 | | | | | | |

