



① OVEN SWITCH

Switch Position	0	72	144	216	288
4 - P2		■		■	
3 - P1			■		■
1 - P1				■	
2 - P1		■	■	■	■
5 - P3		■	■	■	■