



OVEN SWITCH	0	36	72	108	144	180	216	252	288	324
4 - P2										
3 - P2										
1 - P1										
2 - P1										
5 - P3										
4 - P2										
3 - P2										
1 - P1										
2 - P1										
5 - P3										
4 - P2										
3 - P2										
1 - P1										
2 - P1										
5 - P3										

357 539104a

357539102A