



OVEN SWITCH	8	144	216	288
0	72			
7 - 7a				
6 - 5a				
5 - 5a				
4 - 5a				
3 - 3a				
2 - 2a				
1 - 1a				

357 538405a