



357 751706a

OVEN SWITCH ①

ANGLE	0	30	60-240	270	300
POSITION	0	LAMP	OVEN	BOTTOM	TOP
P <sub>3</sub> ⊖--⊖5					
P <sub>1</sub> ⊖--⊖2					
P <sub>2</sub> ⊖--⊖4					

PLATE SWITCH ②

POSITION	0	1	2	3	4	5	6
P <sub>3</sub> ⊖--⊖5							
P <sub>1</sub> ⊖--⊖2							
P <sub>2</sub> ⊖--⊖4							