



SCHEMA ELETRICO

OVEN SWITCH	0	8	7	6	5	4	3	2	1
POSIZIONI	0	8	7	6	5	4	3	2	1
6 - 6a									
5 - 5a									
4 - 4a									
3 - 3a									
2 - 2a									
1 - 1a									

357 582903a