


WIRING

OVEN SWITCH	9	8	7	6	5	4	3	2	1
0	72	144	216	288					
7 - 7a									
6 - 5a									
5 - 5a									
4 - 5a									
3 - 3a									
2 - 2a									
1 - 1a									

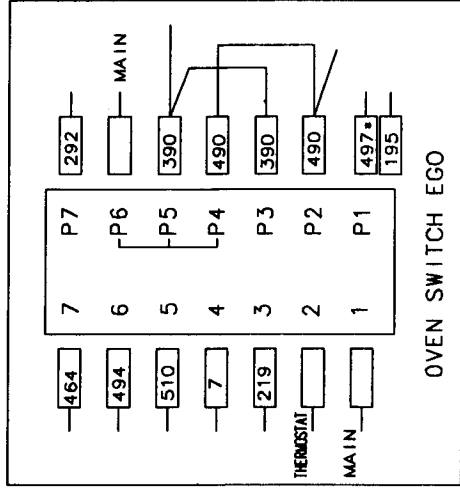

OVEN SWITCH EGO

357 548801a