



WIRING

OVEN SWITCH

POSITIONI	0	6	5	4	3	2	1
1 - 1a							
2 - 2a							
3 - 3a							
4 - 4a							
5 - 5a							
6 - 6a							

357 589902a