
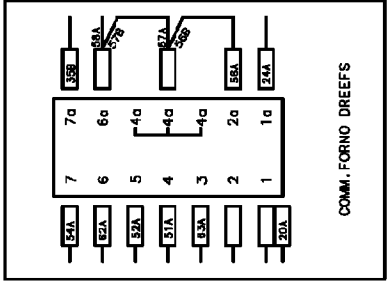
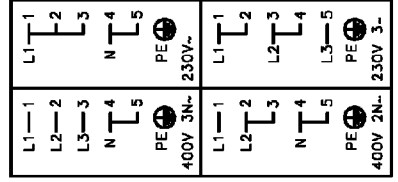


OVEN SWITCH	0	72	144	216	288
7 - P7					
6 - P6					
5 - P5					
4 - P4					
3 - P3					
2 - P2					
1 - P1					

PLATE SWITCH	0	1	2	3	4	5	6
5							
4							
3							
2							
1							
0							

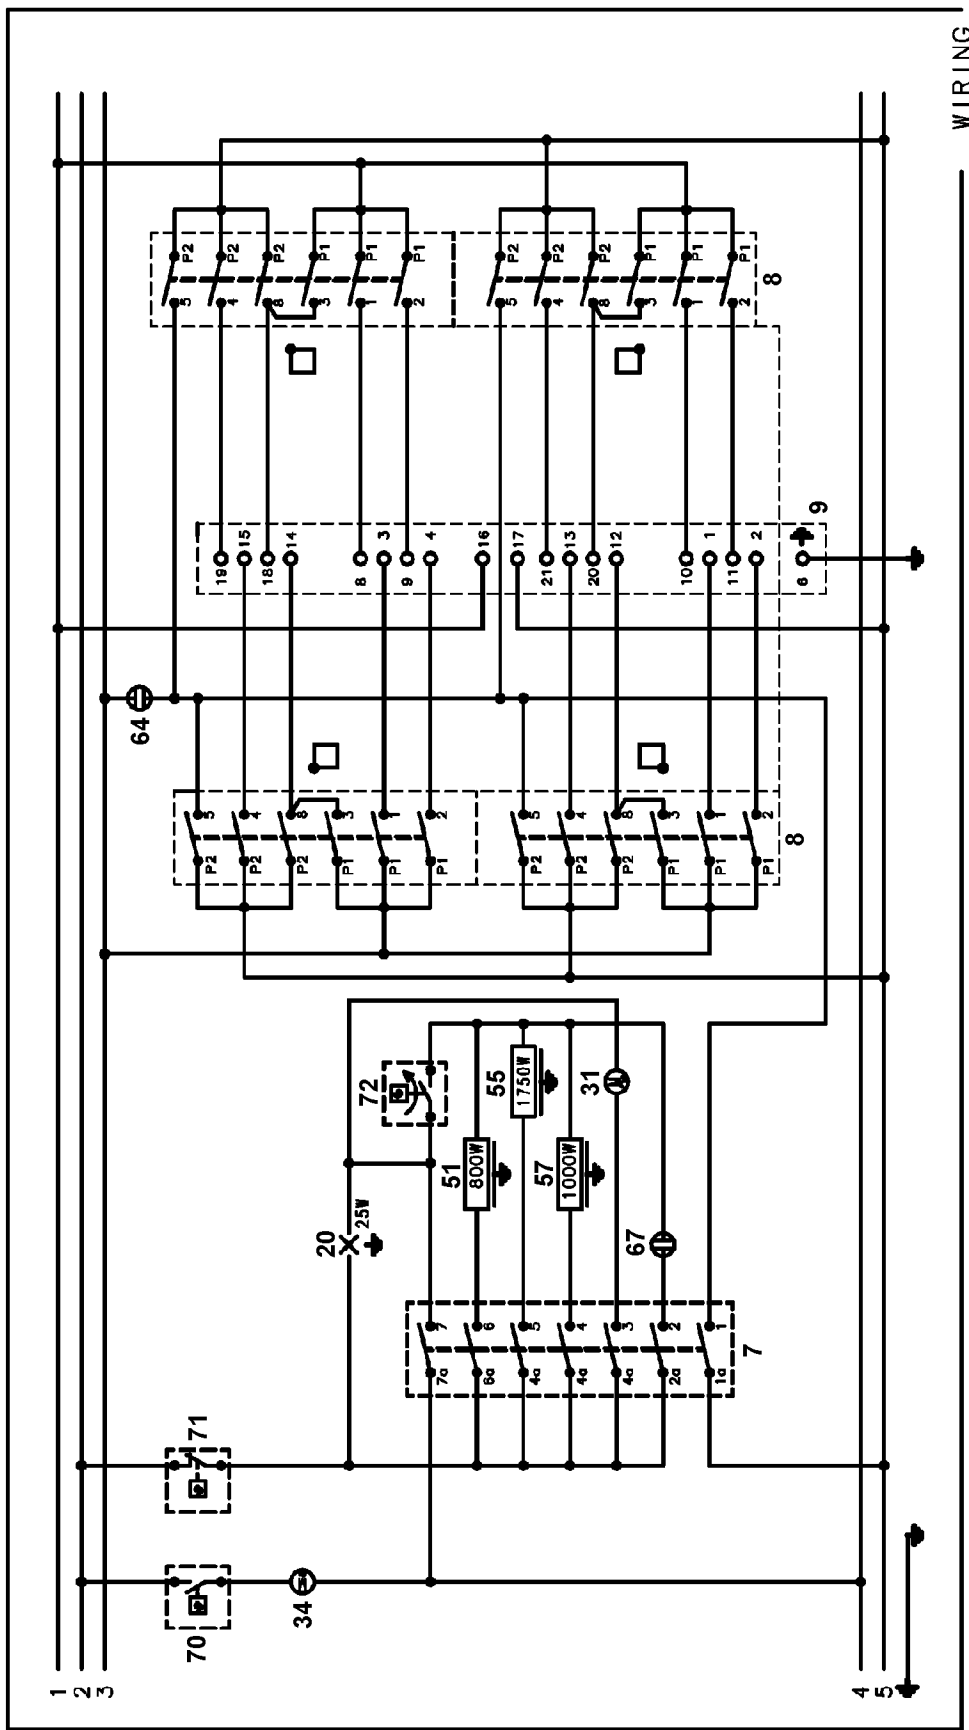

WIRING