





PLATE SWITCH ②

POS	0	6	5	4	3	2	1
4 - P2							
3 - P2							
3 - P1							
1 - P1							
2 - P1							
5 - P3							

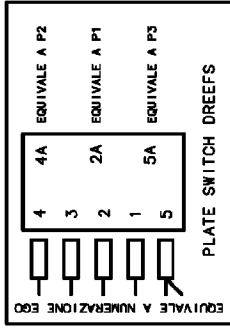

OVEN SWITCH ①

POSIZIONI	0	LUCE	FORNO	GRILL
P3				
P1				
P2				

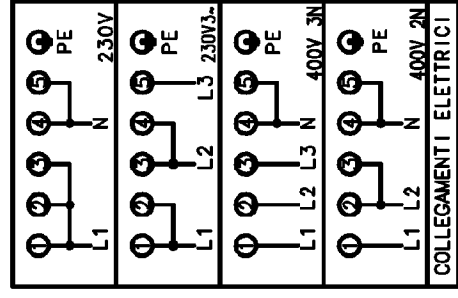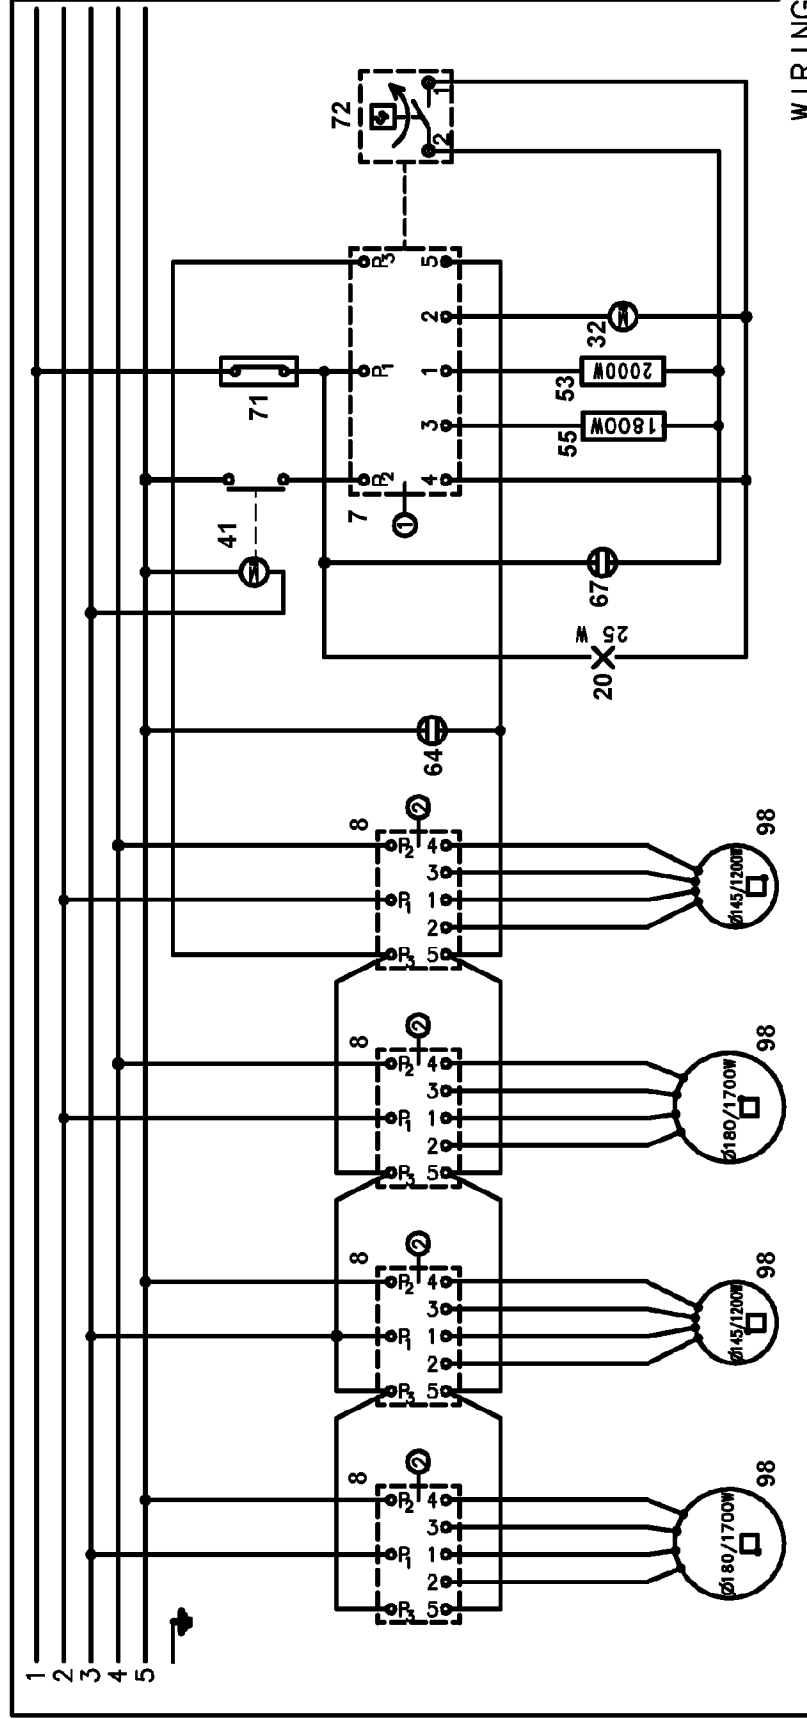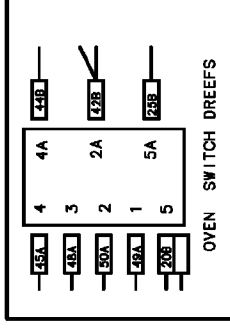

357 600602a