



OVEN SWITCH	POSITIONI	0	1	2	3	4	5	6
1 - 1a								
2 - 2a								
3 - 3a								
4 - 4a								
5 - 5a								
6 - 6a								

357 546203a