



① OVEN SWITCH

| | | | | | |
|--------|---|----|-----|-----|-----|
| 4 | 0 | 72 | 144 | 216 | 288 |
| 4 - P2 | | | | | |
| 3 - P1 | | | | | |
| 1 - P1 | | | | | |
| 2 - P1 | | | | | |
| 5 - P3 | | | | | |

357 654102a