



| | | | | | |
|-------------|---|----|-----|-----|-----|
| OVEN SWITCH | 0 | 72 | 144 | 216 | 288 |
| 7 - 7a | | | | | |
| 6 - 5a | | | | | |
| 5 - 5a | | | | | |
| 4 - 5a | | | | | |
| 3 - 3a | | | | | |
| 2 - 2a | | | | | |
| 1 - 1a | | | | | |

357 533304a