



OVEN SWITCH	POSITIONI	0	6	5	4	3	2	1
	1 - 1a							
2 - 2a								
3 - 3a								
4 - 4a								
5 - 5a								
6 - 6a								

357 546205a