



WIRING

OVEN SWITCH	0	5	4	3	2	1
POSIZIONI	0	5	4	3	2	1
6 - 6a						
5 - 5a						
4 - 4a						
3 - 3a						
2 - 2a						
1 - 1a						

357 585602a