


OVEN SWITCH


0	72	144	216	288
7 - P7				
6 - P6				
5 - P5				
4 - P4				
3 - P3				
2 - P2				
1 - P1				

PLATE SWITCH

0	5	10	15	20
1				
2				
3				
4				
5				
6				

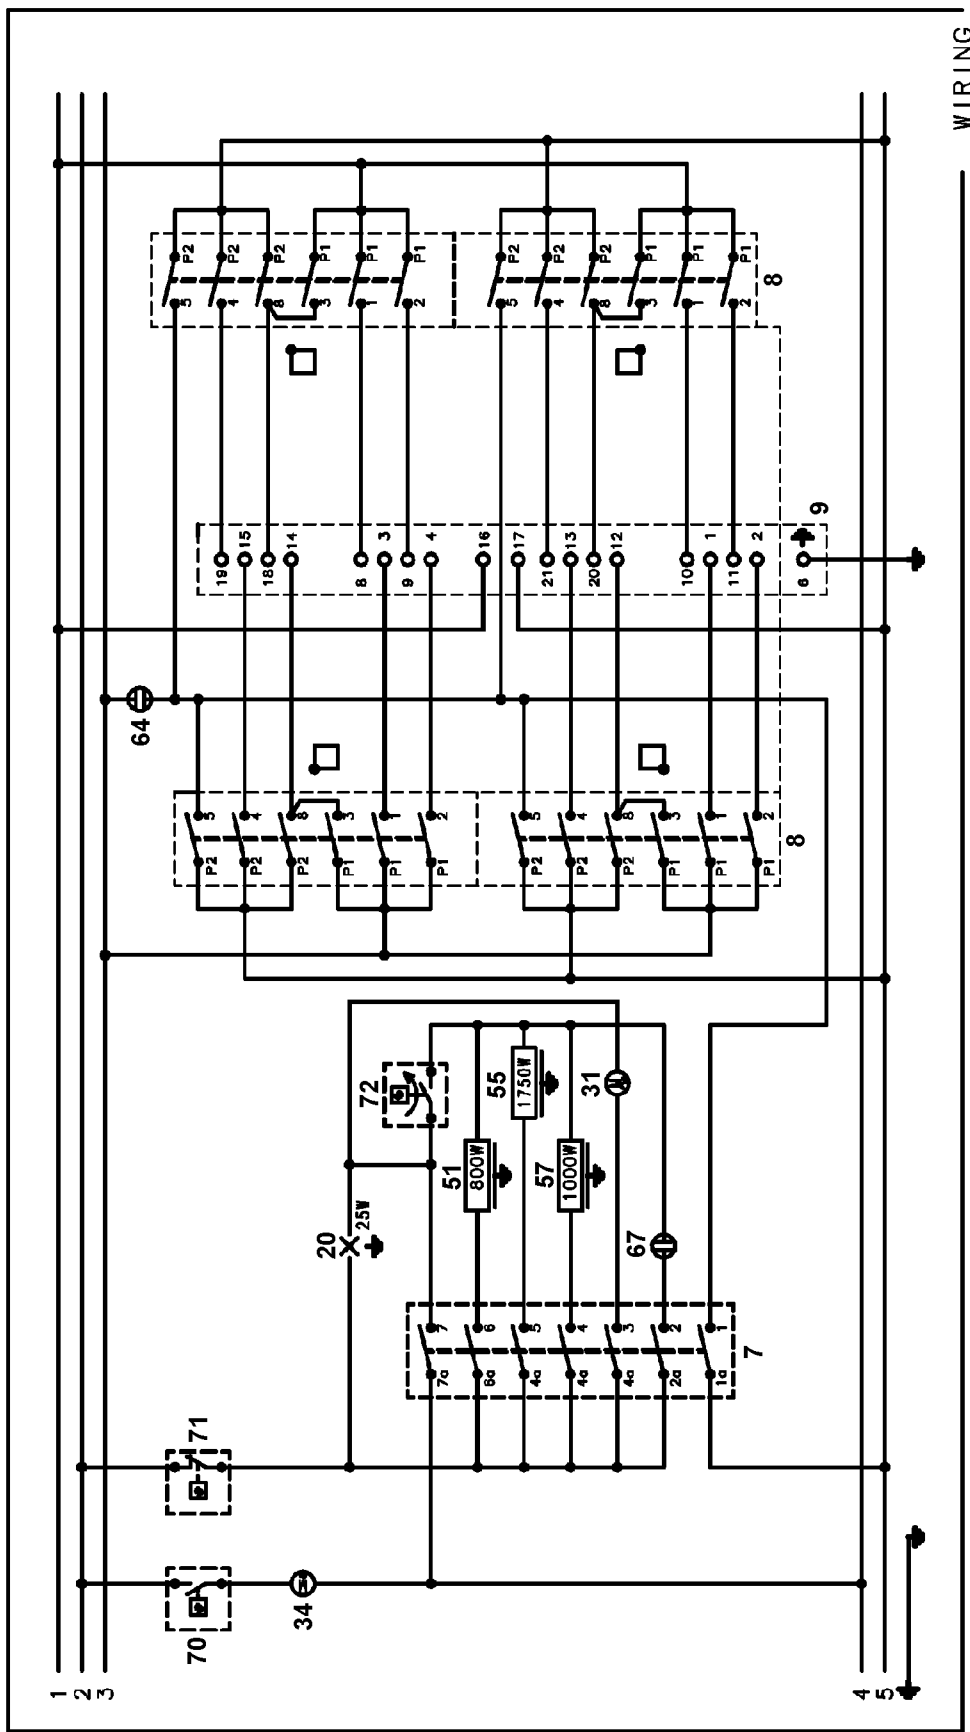

L1-1	L1-1
L2-2	L2-2
L3-3	L2-3
N	N
4	4
5	5
PE	PE
400V 3N- 230V~	400V 2N- 230V 3-

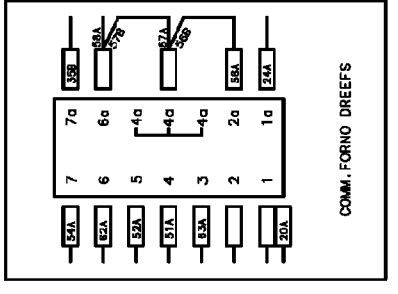

WIRING

357 753803a