


SCHEMA ELETRICO

357 592002a

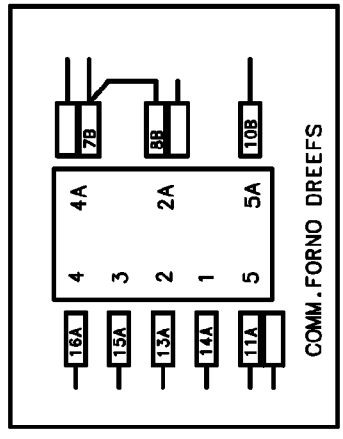

① OVEN SWITCH

4	0	72	144	216	288
4 - P2					
3 - P1					
1 - P1					
2 - P1					
5 - P3					