



| OVEN SWITCH | 0 | 72 | 144 | 216 | 288 |
|-------------|---|----|-----|-----|-----|
| 4 - P2      |   |    |     |     |     |
| 3 - P1      |   |    |     |     |     |
| 1 - P1      |   |    |     |     |     |
| 2 - P1      |   |    |     |     |     |
| 5 - P3      |   |    |     |     |     |

357 632402a