



OVEN SWITCH	72	144	216	288
4 - P2	■	■	■	■
3 - P1	■	■	■	■
1 - P1	■	■	■	■
2 - P1	■	■	■	■
5 - P3	■	■	■	■

357 637602a