


SCHEMA ELETTRICO

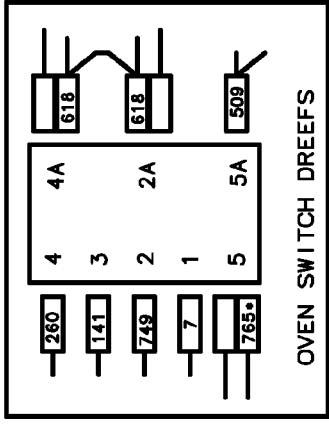

OVEN SWITCH DREEFS

OVEN SWITCH	0	72	144	216	288
4 - P2					
3 - P1					
1 - P1					
2 - P1					
5 - P3					

357 690501a