



OVEN SWITCH	72	144	216	288
4 - P2	█	█	█	█
3 - P1	█	█	█	█
1 - P1	█	█	█	█
2 - P1	█	█	█	█
5 - P3	█	█	█	█

357 694301a