
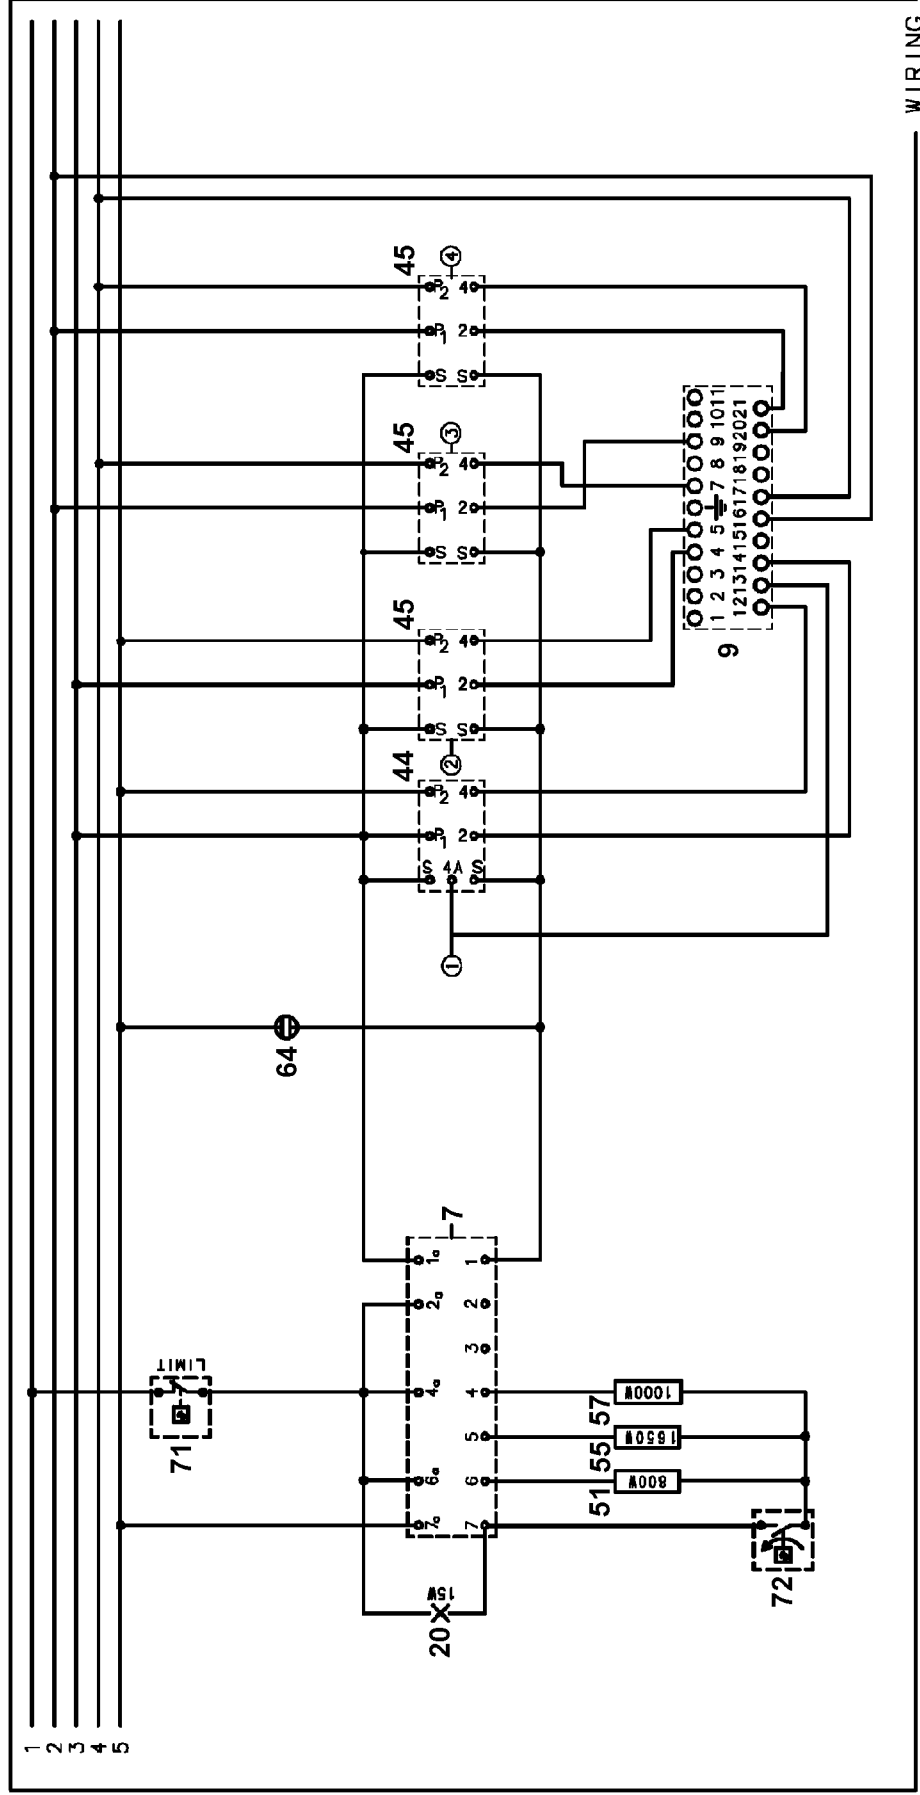
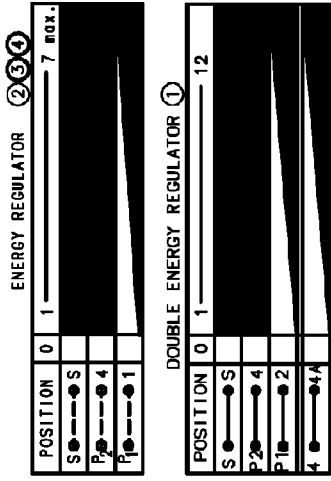


OVEN SWITCH

0	72	144	216	288
7 - 7a				
6 - 6a				
5 - 4a				
4 - 4a				
3 - 4a				
2 - 2a				
1 - 1a				

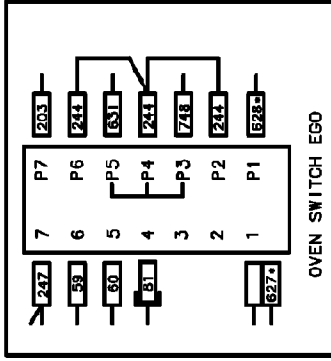

WIRING