



OVEN SWITCH

ANGLE	0	30	60-240	270	300
POSITION	0	LAMP	OVEN	BOTTOM	TOP
P ₃	5				
P ₁	2				
	1				
	3				
P ₂	4				

357767201b