


PLATE SWITCH

| POS    | 0 | 4  | 3   | 2   | 1   |
|--------|---|----|-----|-----|-----|
|        | 0 | 72 | 144 | 216 | 288 |
| 4 - P2 |   |    |     |     |     |
| 3 - P2 |   |    |     |     |     |
| 3 - P1 |   |    |     |     |     |
| 1 - P1 |   |    |     |     |     |
| 2 - P1 |   |    |     |     |     |
| 5 - P3 |   |    |     |     |     |

OVEN SWITCH

|        | 0 | 72 | 144 | 216 | 288 |
|--------|---|----|-----|-----|-----|
|        | 0 | 72 | 144 | 216 | 288 |
| 4 - P2 |   |    |     |     |     |
| 3 - P1 |   |    |     |     |     |
| 1 - P1 |   |    |     |     |     |
| 2 - P1 |   |    |     |     |     |
| 5 - P3 |   |    |     |     |     |

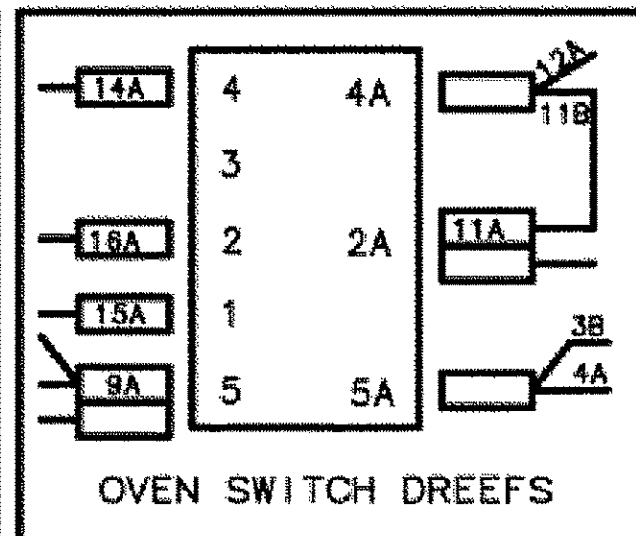

OVEN SWITCH DREEFS

357693102a