 



 
 



 










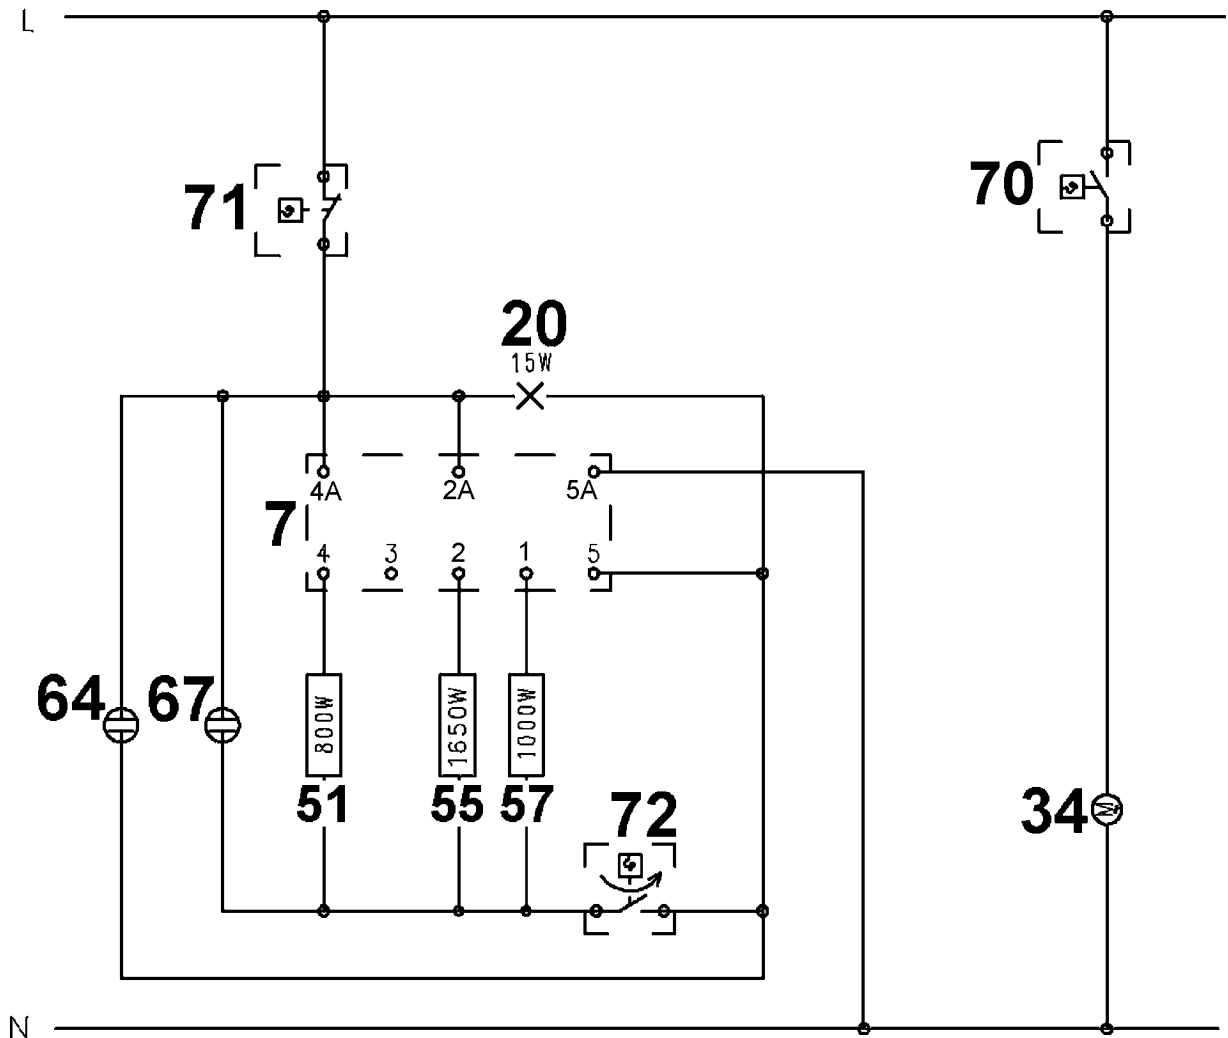


OVEN SWITCH

POSITION	0					
	0	60	120	180	240	300
4 - 4A						
3 - 2A						
2 - 2A						
1 - 2A						
5 - 5A						



357 697901a