

OVEN SWITCH ①

OVEN	POS.	0	30	60+ 240	270	300	330
4-P2							
3-P1							
1-P1							
2-P1							
5-P3							



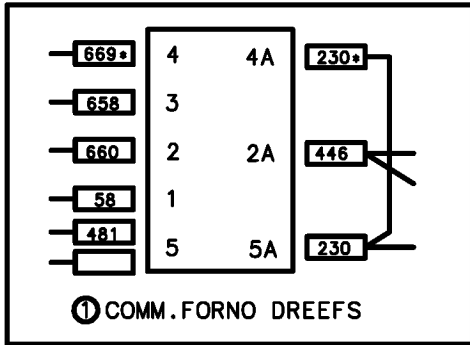


PLATE SWITCH ②

POS	0	6	5	4	3	2	1
4 - P2							
3 - P2							
3 - P1							
1 - P1							
2 - P1							
5 - P3							

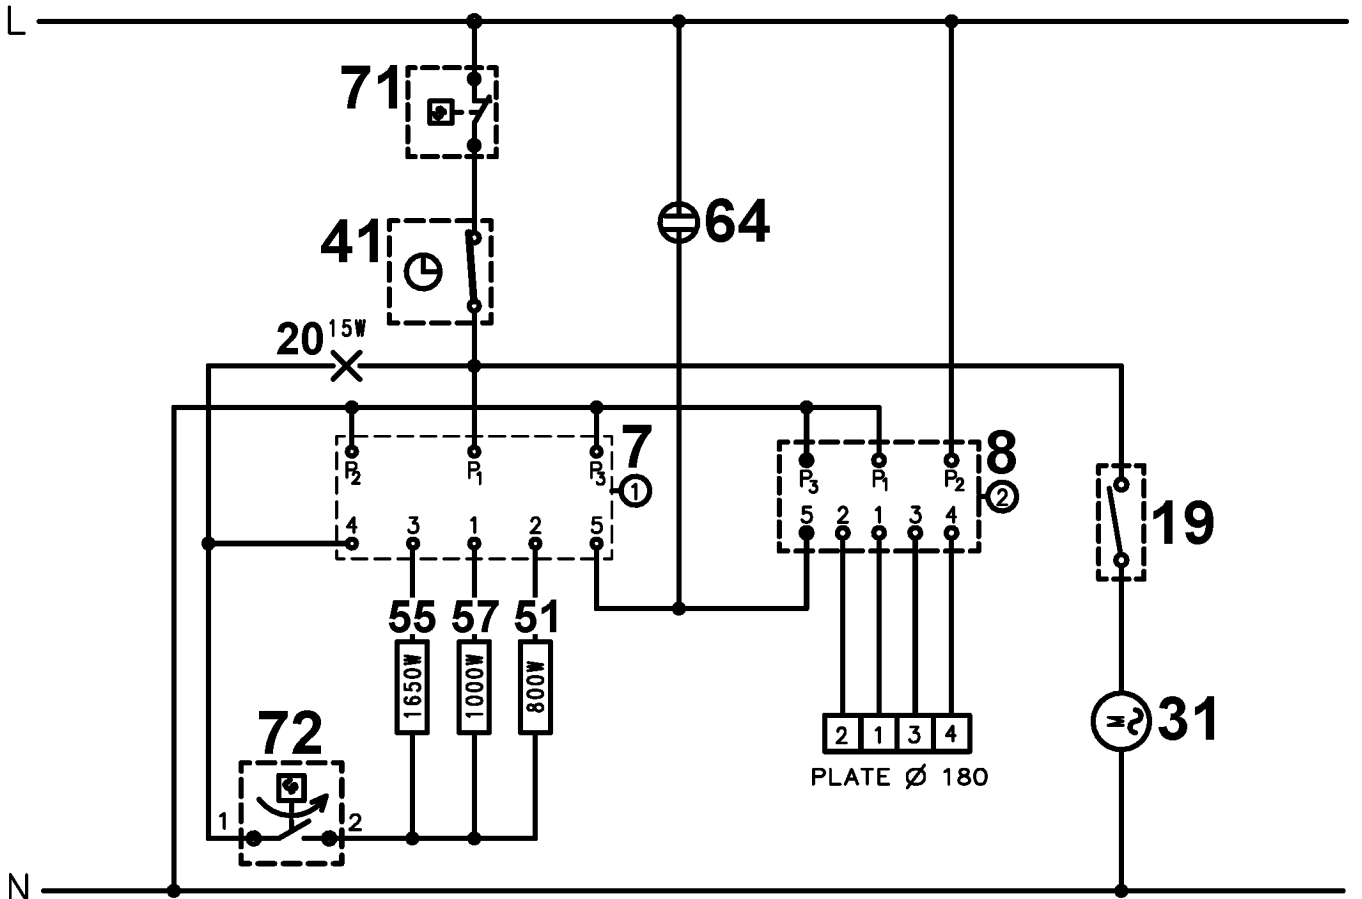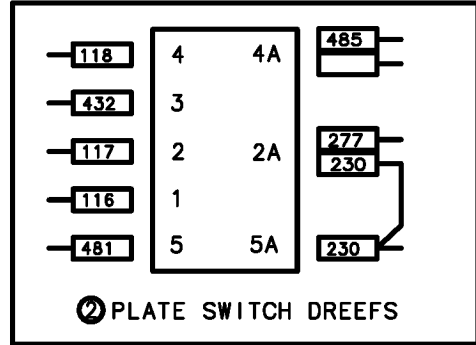

357 667401a