
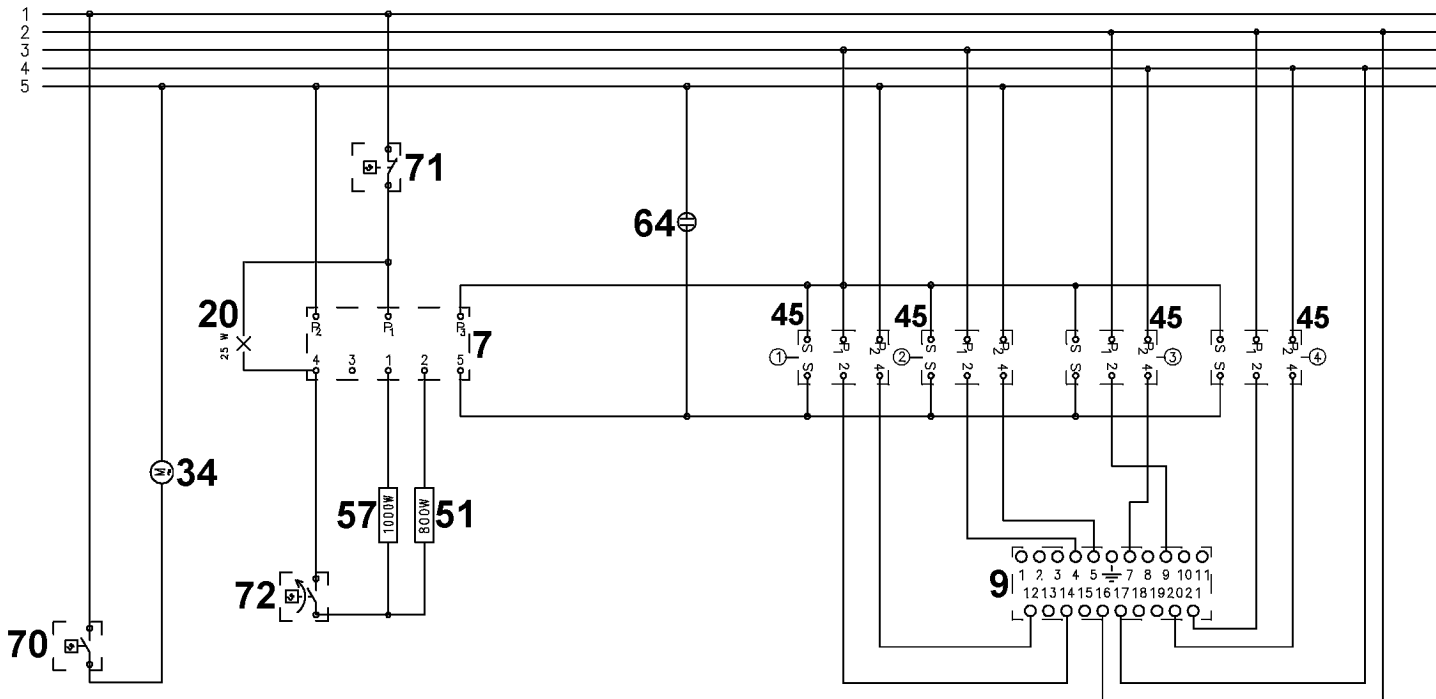


OVEN SWITCH

	0	30	60-240	270	300
4 - P2					
3 - P1					
1 - P1					
2 - P1					
5 - P3					

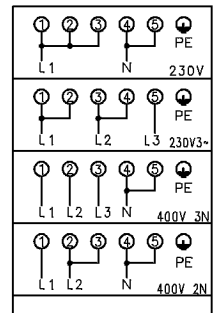

357 769901a