
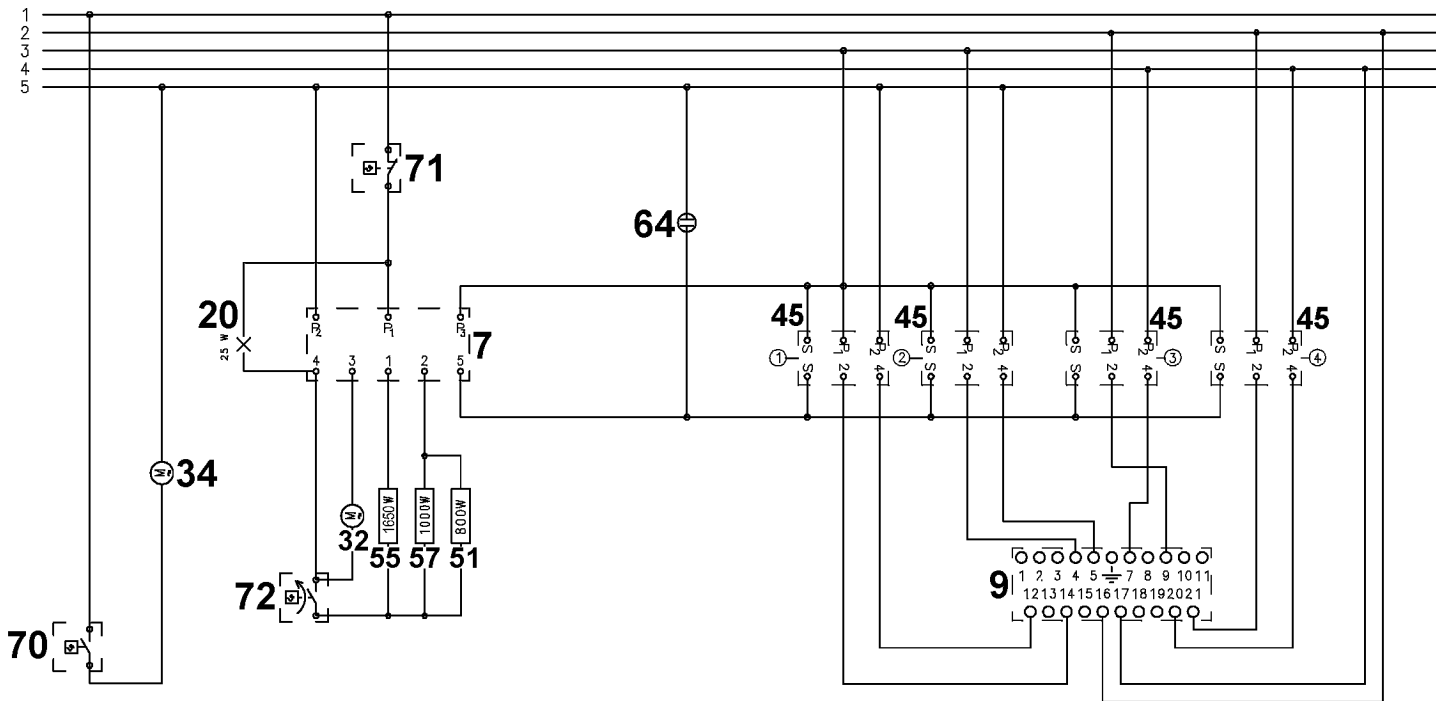


OVEN SWITCH

	0	8	144	216	288
4 - P2					
3 - P1					
1 - P1					
2 - P1					
5 - P3					

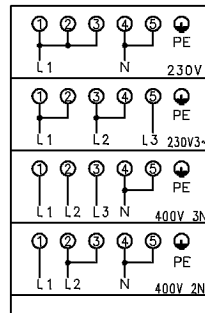

**357 770001a**