

OVEN SWITCH



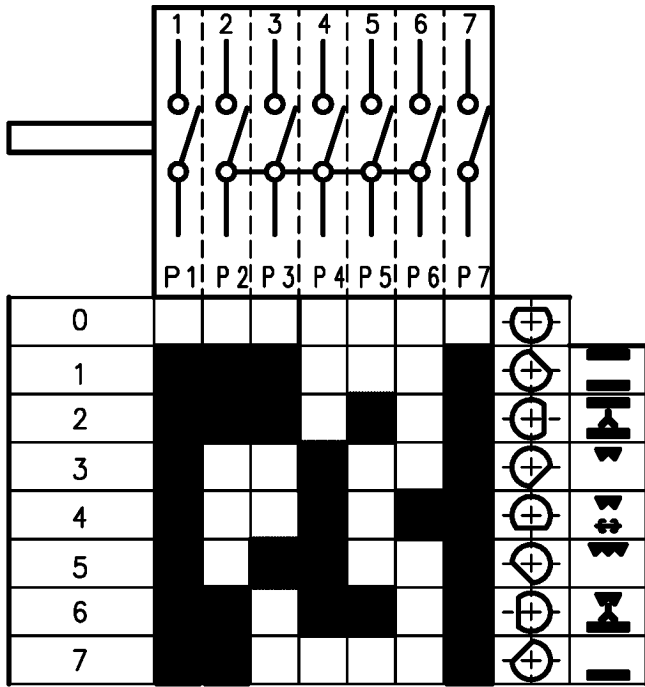


PLATE SWITCH ②

POS	0	6	5	4	3	2	1
4 - P2		■	■		■		
3 - P2		■		■		■	
3 - P1					■		■
1 - P1		■		■		■	
2 - P1		■			■		■
5 - P3						■	■

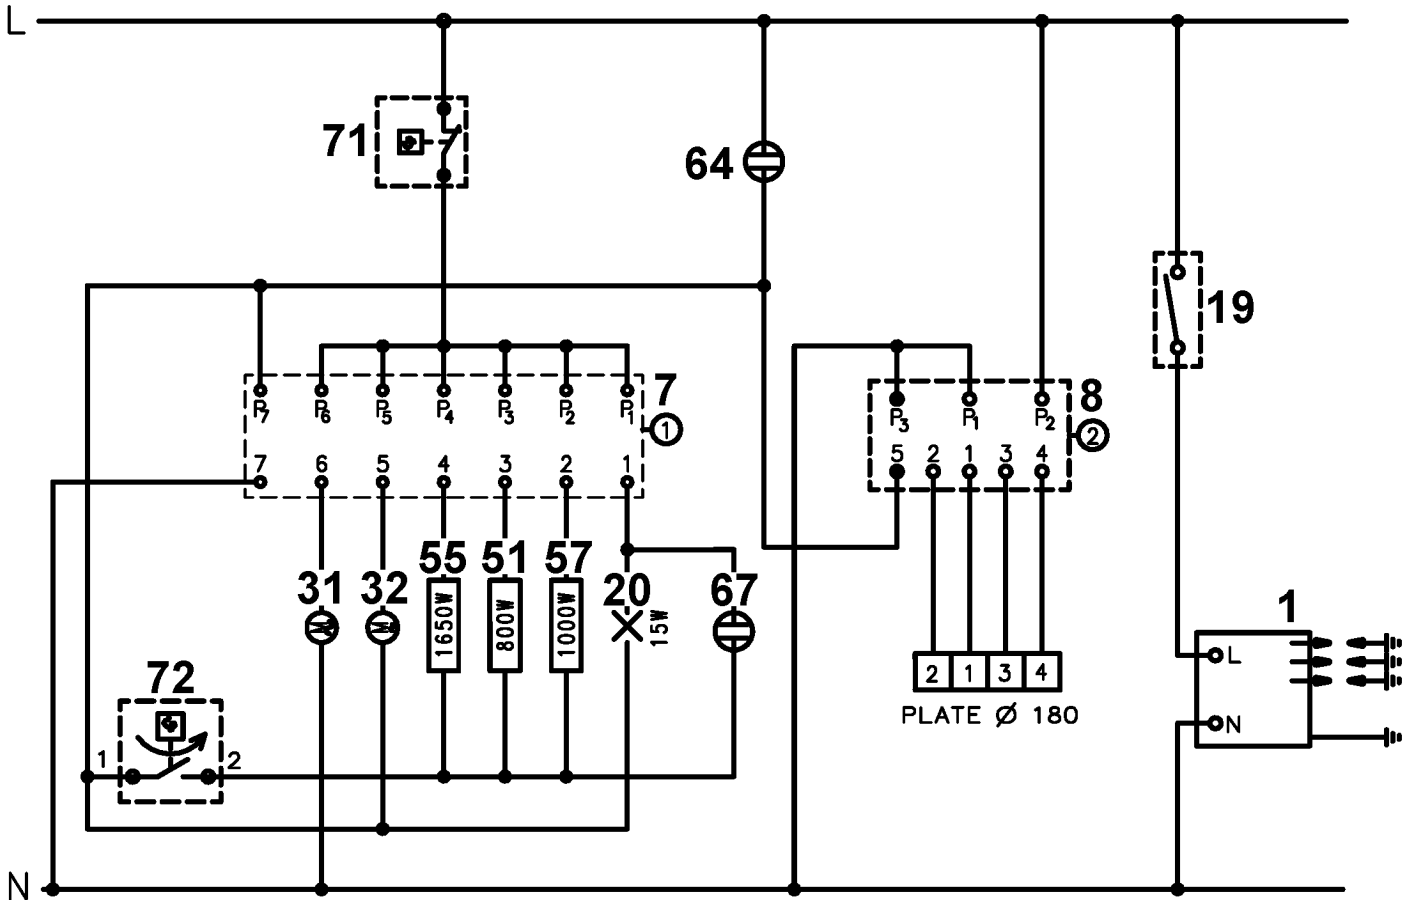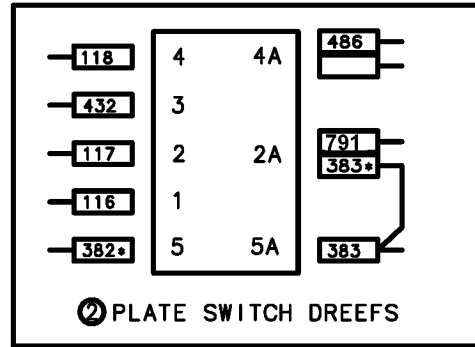

357 668303a