


OVEN SWITCH

POSIZIONI	0	1	2	3	4	5	6
1 - 1a		■	■	■	■	■	■
2 - 2a					■	■	■
3 - 3a					■	■	■
4 - 4a				■	■	■	■
5 - 5a							
6 - 6a							■

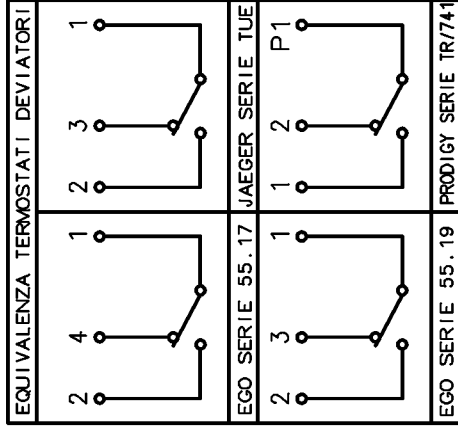

357 699802a