

OVEN SWITCH

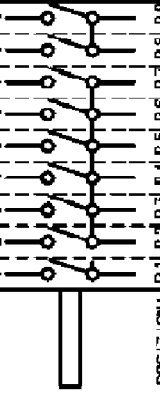


DIAGRAMMA ELETTRICO

POSIZIONI	P1	P2	P3	P4	P5	P6	P7	P8	P9
0									
1									
2									
3									
4									
5									
6									
7									
8									
9									
10									

WIRING