



OVEN SWITCH

POSIZIONI	0	1	2	3	4	5	6
1 - 1α							
2 - 2α							
3 - 3α							
4 - 4α							
5 - 5α							
6 - 6α							

357 431601a