



OVEN SWITCH	POSITIONI	0	1	2	3	4	5	6
	1 - 1α							
	2 - 2α							
	3 - 3α							
	4 - 4α							
	5 - 5α							
	6 - 6α							

357 432301a