



OVEN SWITCH (1)

ANGLE POSITION	0	30	60-240	270	300	330
	0	LAMP	OVEN	BOTTOM	TOP	GRILL
P ₀	→ 5					
P ₁	→ 2					
P ₂	→ 1					
P ₃	→ 3					
P ₄	→ 4					

