



OVEN SWITCH		8			
0	72	144	216	288	
4 - P2					
3 - P1					
1 - P1					
2 - P1					
5 - P3					

