



ELECTRIC DIAGRAM  
DIAGRAMMA ELETTRICO

POSITIONS POSIZIONI	P1	P2	P3	P4	P5	P6	P7	P8
0	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕
1	⊖	⊖	⊖	⊖	⊖	⊖	⊖	⊖
2	⊕	⊖	⊖	⊖	⊖	⊖	⊖	⊖
3	⊕	⊖	⊖	⊖	⊖	⊖	⊖	⊖
4	⊕	⊖	⊖	⊖	⊖	⊖	⊖	⊖
5	⊕	⊖	⊖	⊖	⊖	⊖	⊖	⊖
6	⊕	⊖	⊖	⊖	⊖	⊖	⊖	⊖

OVEN SWITCH 1