


**339690601**  
**CIRCUIT DIAGRAM**  
**SCHEMA FUNZIONALE**

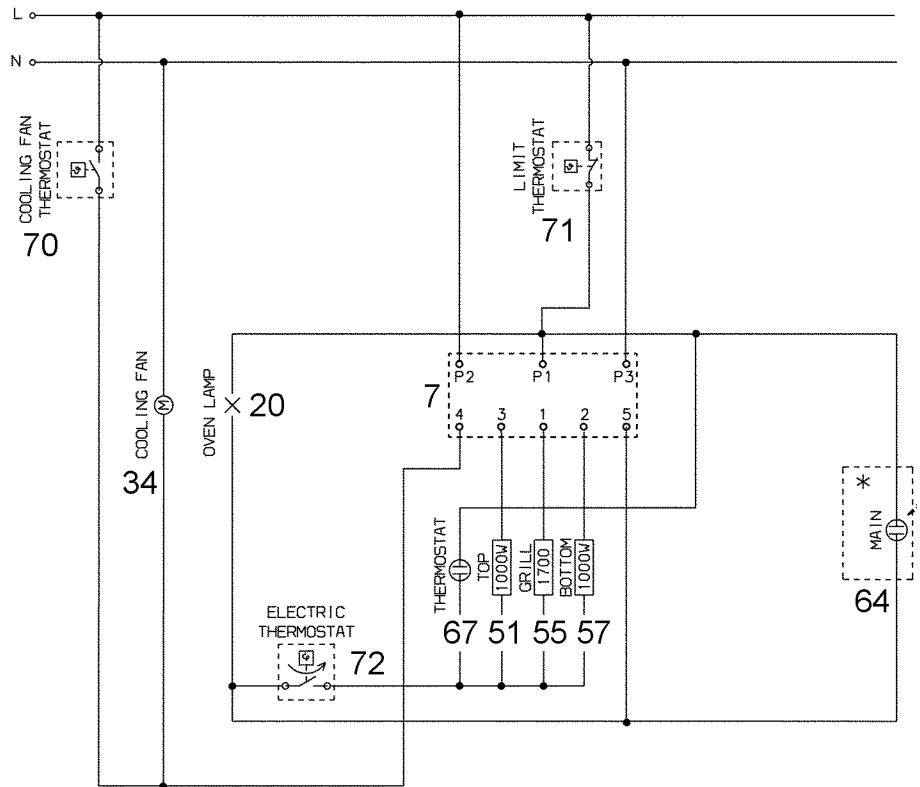

ELECTRIC DIAGRAM  
 DIAGRAMMA ELETTRICO

POSITION	0					
	0	60	120	180	240	300
4 - P2						
3 - P1						
1 - P1						
2 - P1						
5 - P3						

OVEN SWITCH 1 **357067701**