



WIRING

## ELECTRIC DIAGRAM DIAGRAMMA ELETTRICO

	0	60	120	180	240	300	
4 - P2							
3 - P1							
1 - P1							
2 - P1							
5 - P3							

OVEN SWITCH 1