


807170401

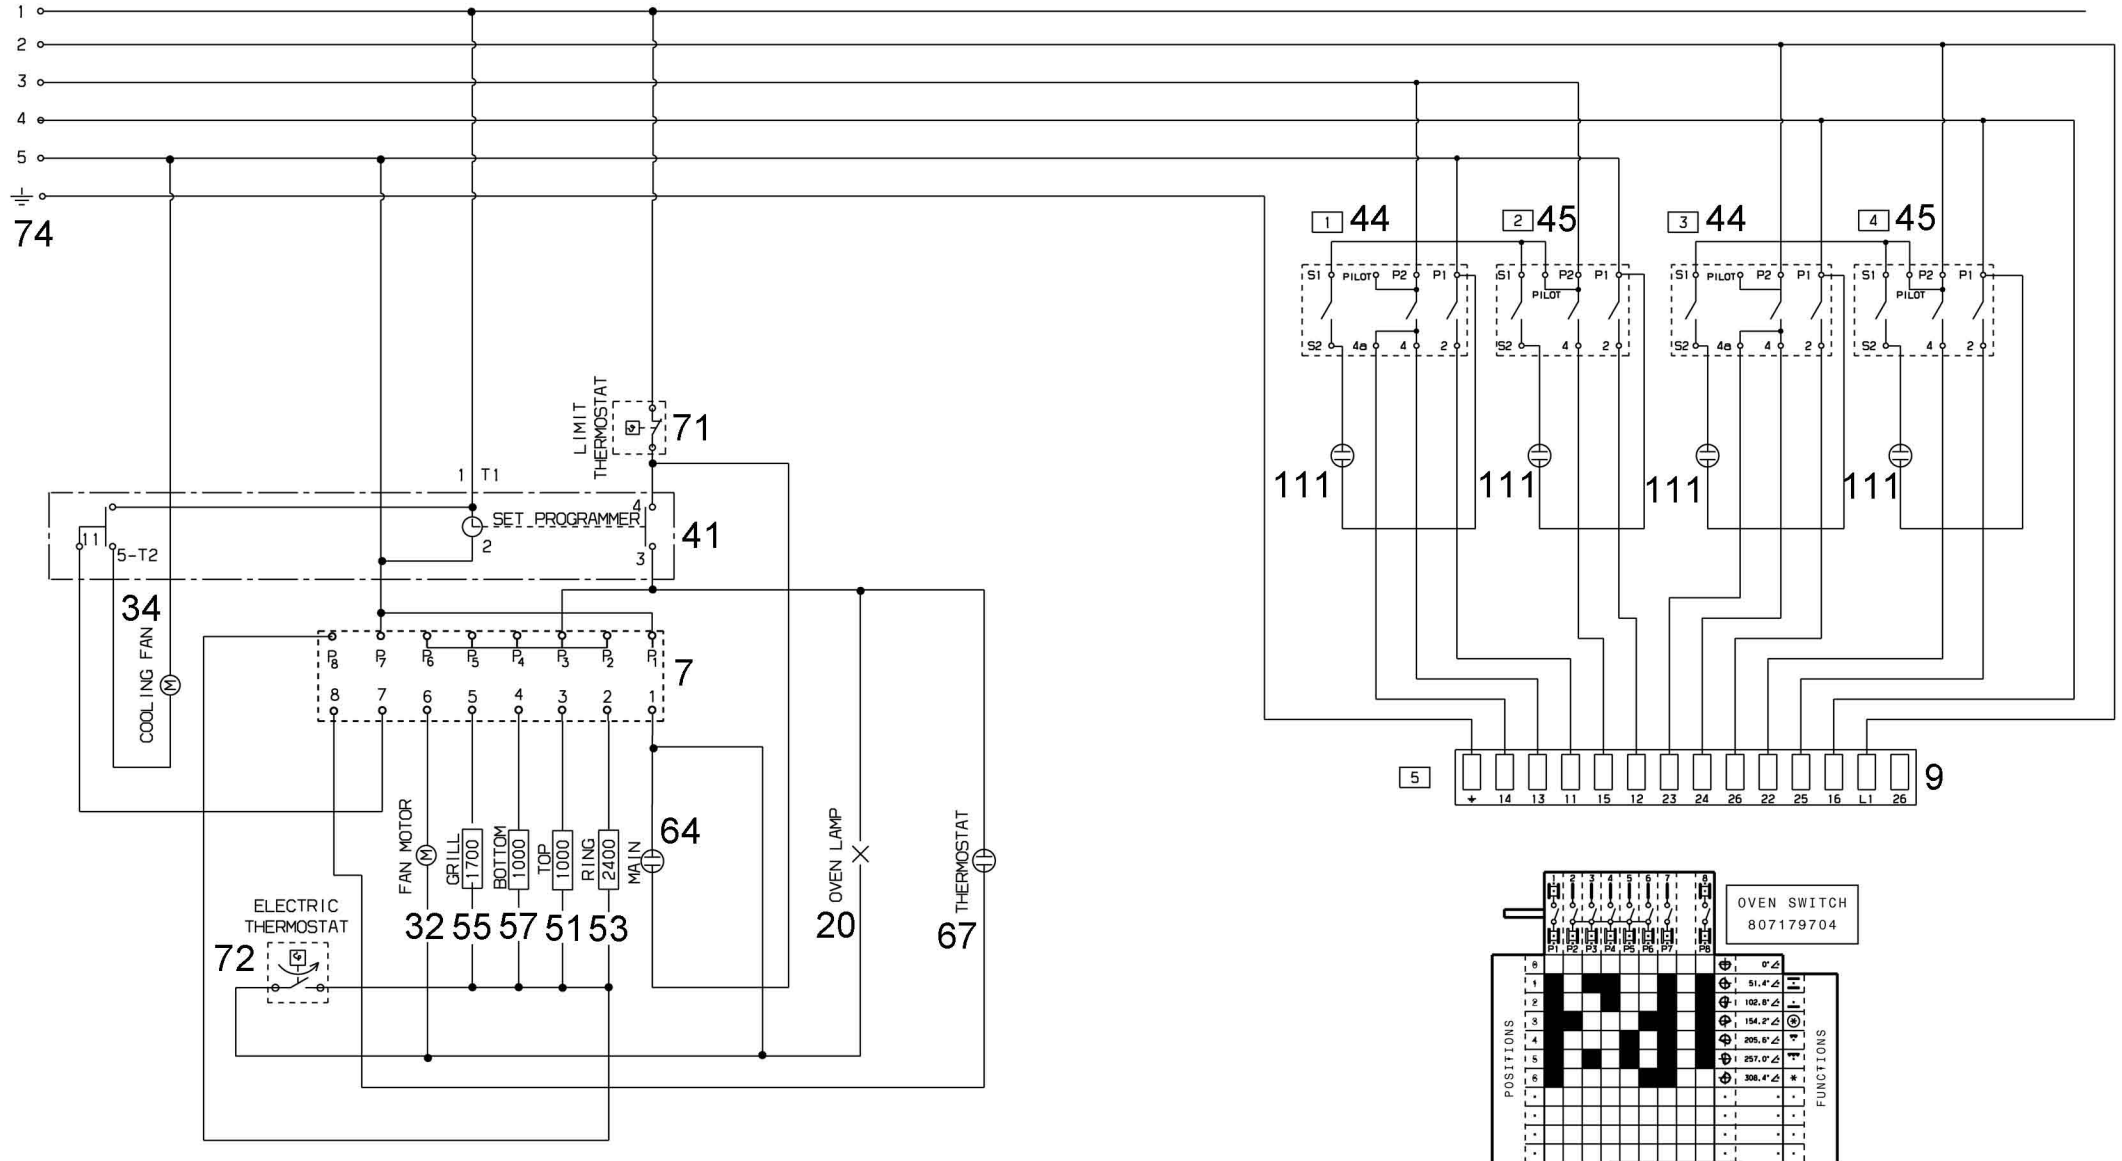

OVEN SWITCH
807179704

POSITIONS	FUNCTIONS
1	51.4°
2	102.8°
3	154.2°
4	205.6°
5	257.0°
6	308.4°
7	
8	