



POSITIONS	CONTACTS (REAR VIEW)											COOKING FUNCTIONS
	1A	2A	3A	4A	5A	6A	7A	8A	9A	10A	11A	
0												0°
1	X					X	X	X				36.00°
2	X	X	X		X		X	X	X			72.00°
3	X	X			X		X		X			108.00°
4	X			X			X	X	X			144.00°
5	X	X		X			X	X	X			180.00°
6	X	X			X		X	X	X			216.00°
7	X			X	X		X	X	X			252.00°
8	X	X	X		X		X	X	X			288.00°
9	X		X	X		X	X	X				324.00°

ANC ROTARY SWITCH: A12342101